


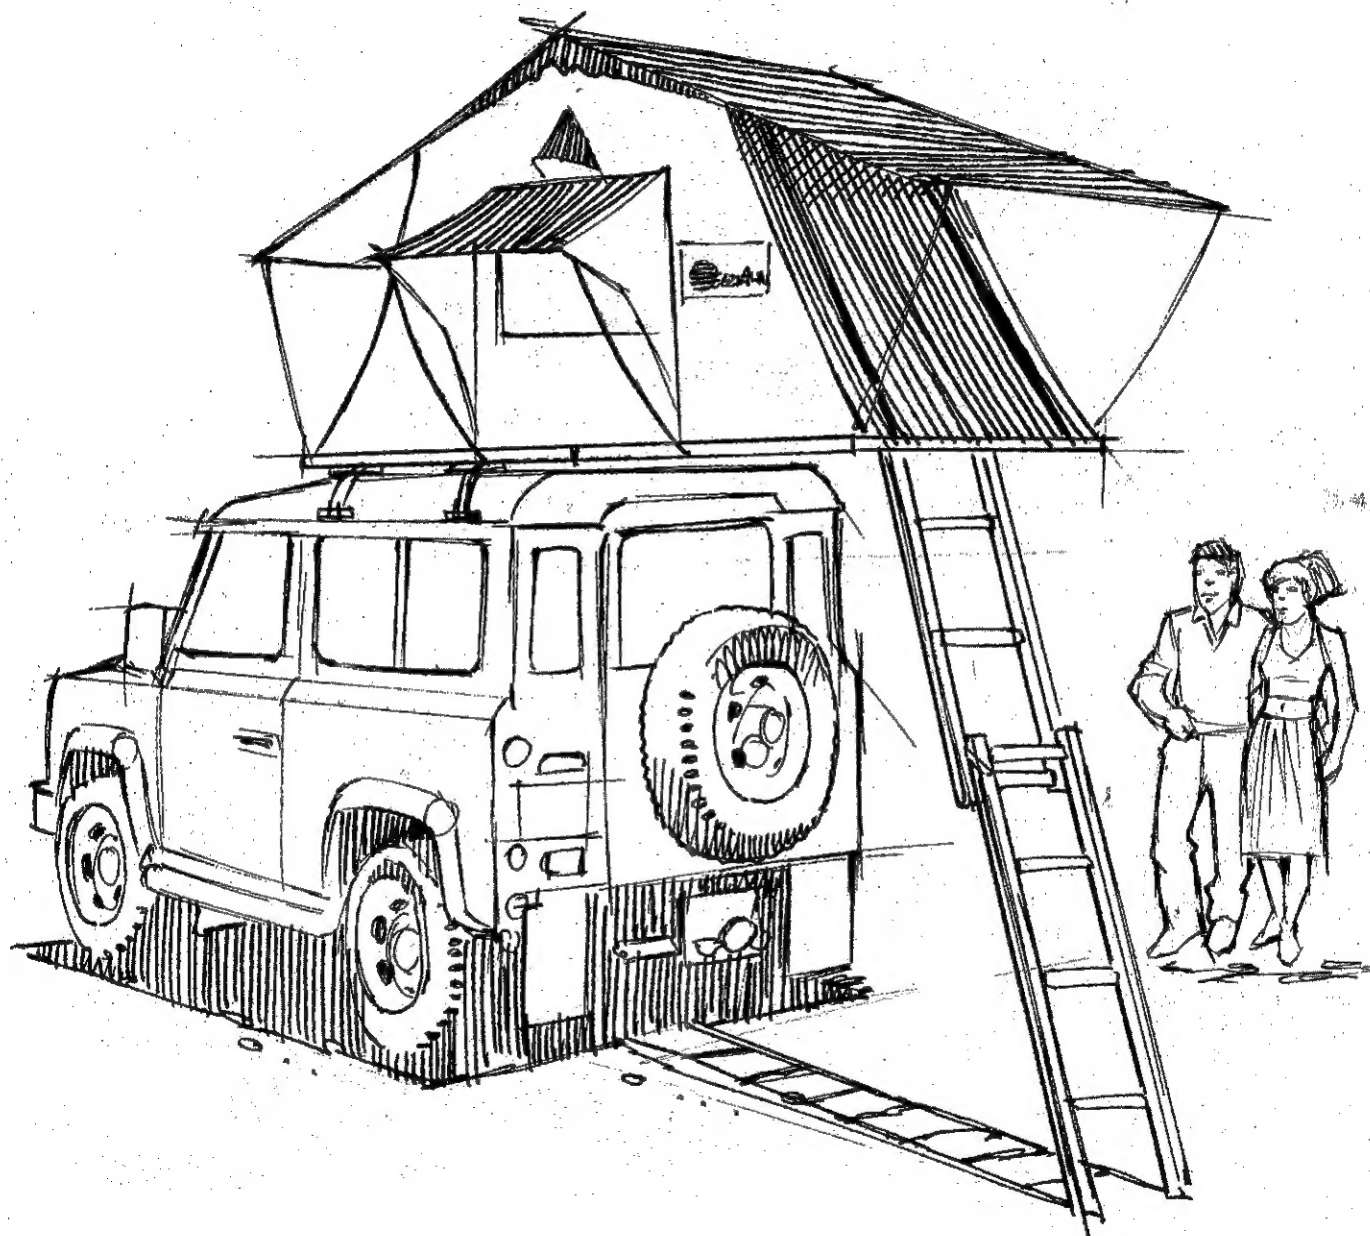

ROOFTENT

OPERATING INSTRUCTIONS

P.O. Box 68323, Bryanston 2021
14 Susan Str. Strydompark, Randburg
South Africa
Tel: (011) 792-1731 Fax (011) 791-0727



HELPFUL HINTS


1. Always make sure TENT is dry when stored - away from RATS and MICE.
2. Do not wash TENT with detergent. ONLY wipe with CLEAN CLOTH.




ROOFTENT

OPERATING INSTRUCTIONS TO OPEN


P.O. Box 68323, Bryanston 2021
14 Susan Str. Strydompark. Randburg
South Africa
Tel: (011) 792-1731 Fax (011) 791-0727

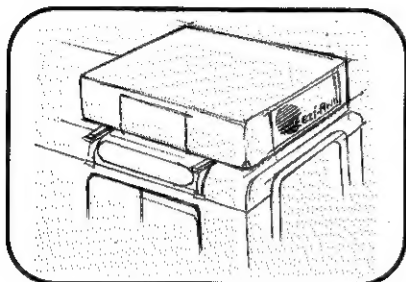

Enclosed rooftop with
travel cover.

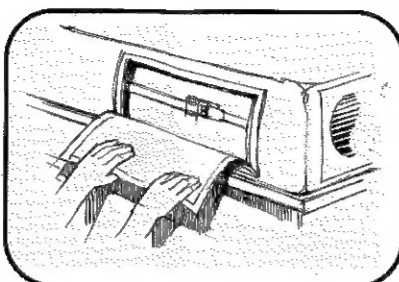


Open flap to access ratchet in
order to remove travel cover.

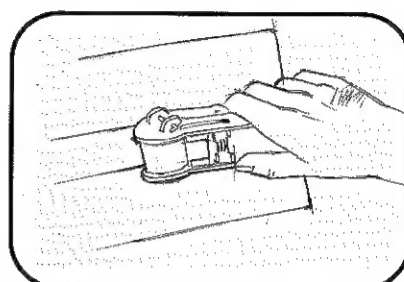


Pull ratchet-head forward to release
strap and remove travel cover.


NOTE: Should ladder be separately delivered of rooftop, then fit ladder as follows:--

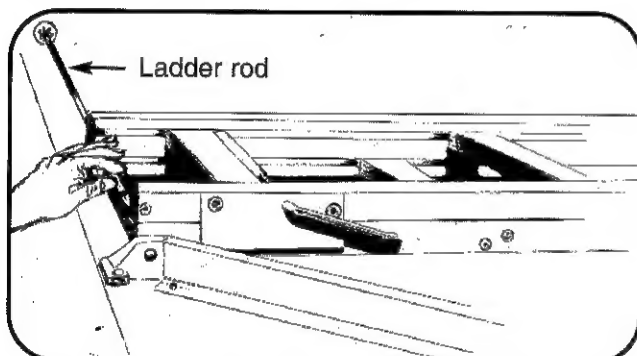

Insert rod through holes of ladder and
aluminium castings.

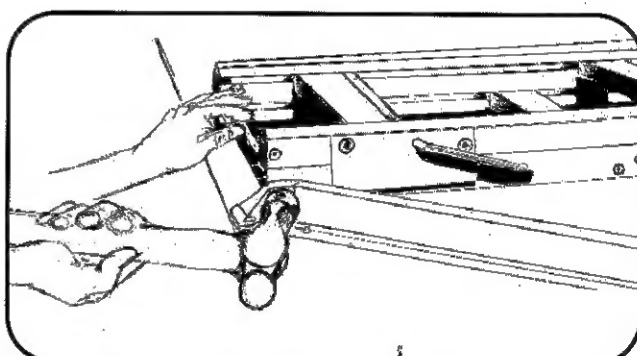

Fix rod by tapping cover-clips to each end.

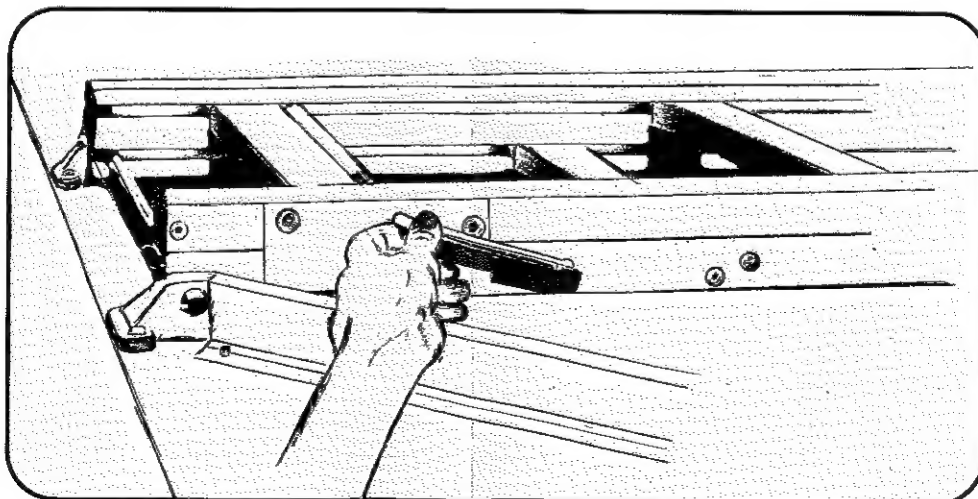


Unlock ladder and slide upper section to full length,
relocate in hole provided and lock




ROOFTENT

OPERATING INSTRUCTIONS


P.O. Box 68323, Bryanston 2021
14 Susan Str. Strydompark, Randburg
South Africa
Tel: (011) 792-1731 Fax (011) 791-0727

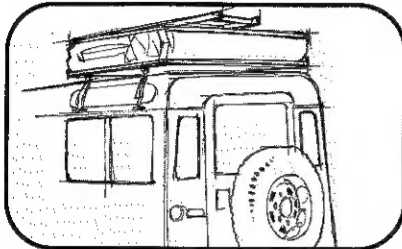


Unlock ladder and slide upper section to full length, relocate in hole provided and lock.

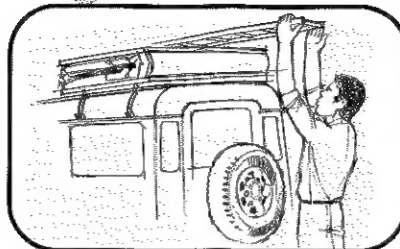


Pull down on fully extended ladder in order to open rooftop.

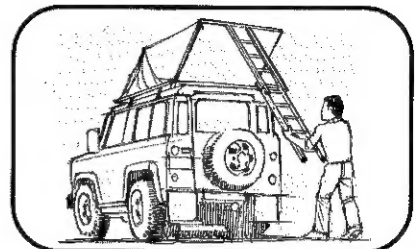


Pull backward to aid unfolding and rest ladder on ground.

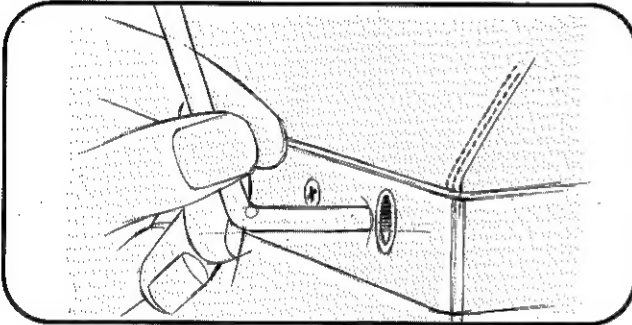

Insert spring steel rods into ferrills of rooftop base beading, bend rods and fit into eyelets of rooftop side canopies and flysheets.

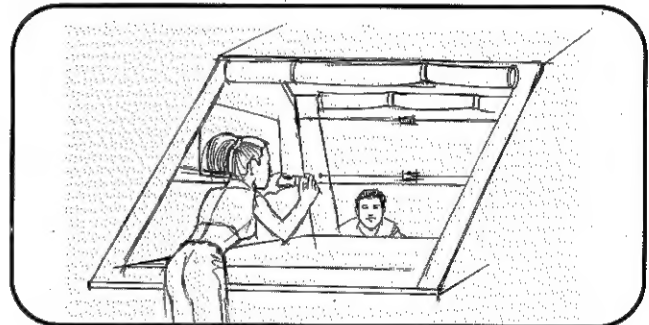

Undo internal plastics clips to release rooftop sidewalls.

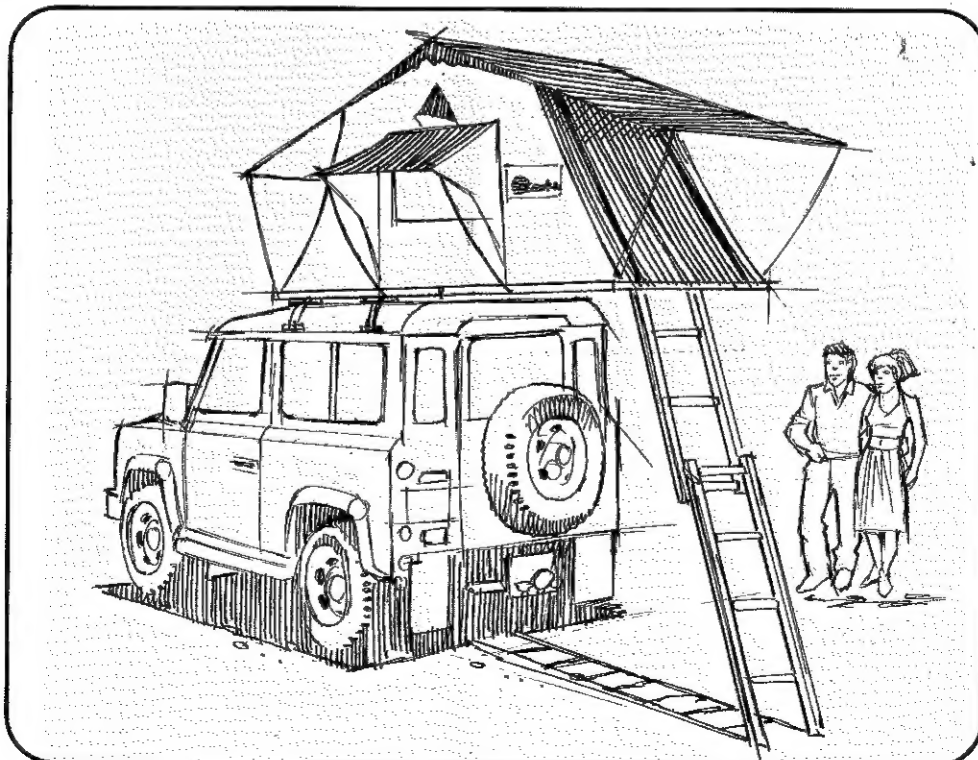


ROOFTENT FULLY SET-UP, READY TO OCCUPY




ROOFTENT

OPERATING INSTRUCTIONS TO CLOSE.


P.O. Box 68323, Bryanston 2021
14 Susan Str. Strydompark. Randburg
South Africa
Tel: (011) 792-1731 Fax (011) 791-0727

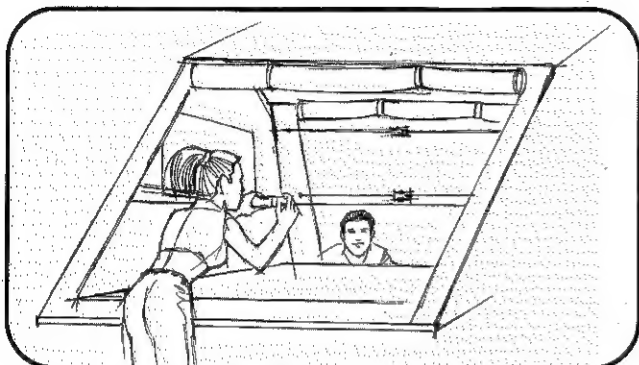


Before closing rooftop, lock plastic clips together to aid folding of rooftop sidewalls .

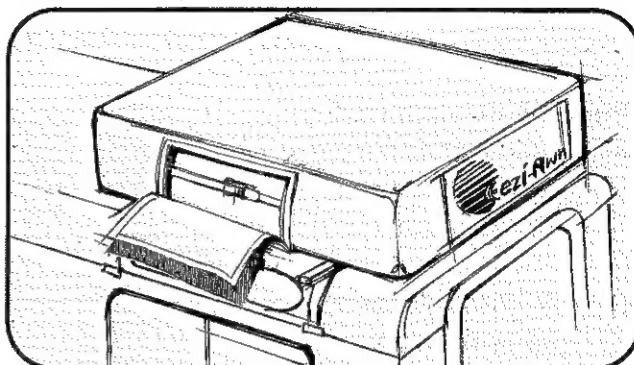


Re-fit travel cover, check that strap is tight across the corners of rooftop base.

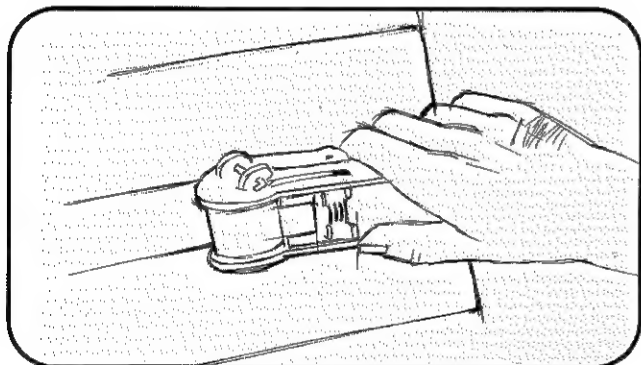

Activate ratchet straps to ensure the travel cover is well secured

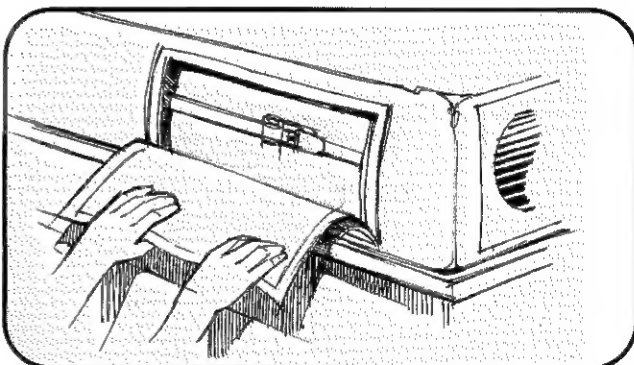

Close ratchet and conceal behind rooftop flap.

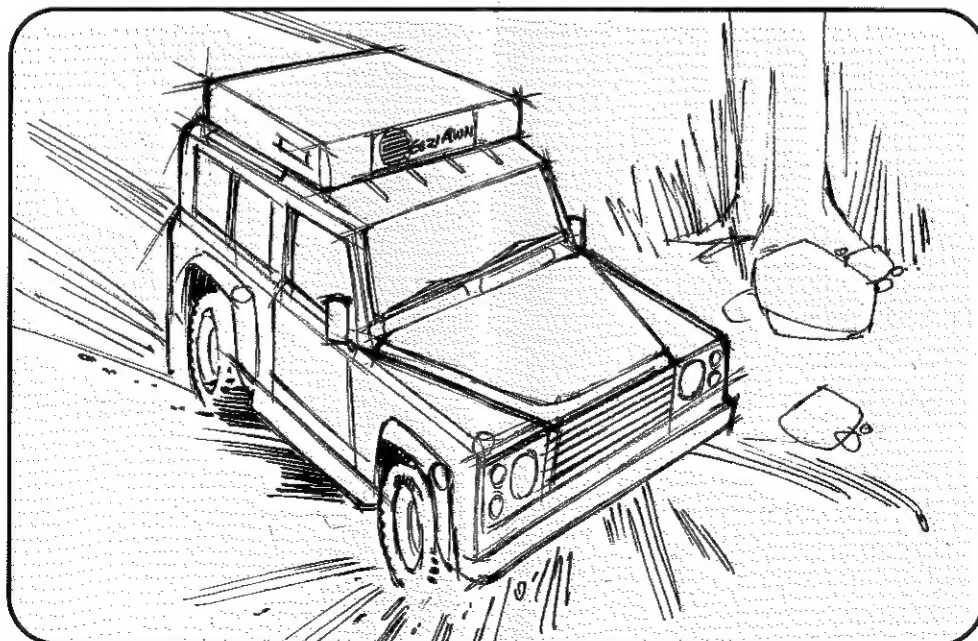

ON THE ROAD AGAIN !! — ENJOY THE RIDE !!




ROOFTENT

INSTALLATION INSTRUCTIONS

P.O. Box 68323, Bryanston 2021
14 Susan Str. Strydompark. Randburg
South Africa
Tel: (011) 792-1731 Fax (011) 791-0727


Drop bolt through hole in fixing slide, Insert slide into rail, attached to rooftopent base.

Drill hole through roofrack slat or board to accommodate bolt, washer and nyloc-nut supplied.

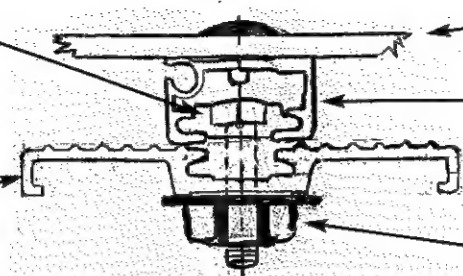

**CROSS-SECTION OF INSTALLATION
ROOFTENT TO ROOFRAK**

PLAN VIEW ROOFTENT BASE RAIL CENTRES

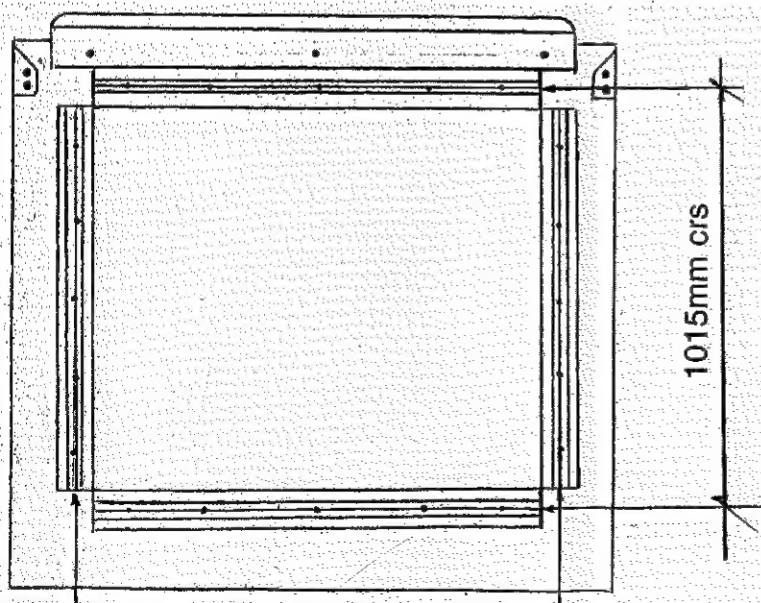

1240mm = 1015mm crs

1400mm = 1185mm crs

1600mm = 1385mm crs

OPTIONAL EXTRAS TO FIT ROOFTENTS

Gutterless rail system to fit rooftents to vehicles without gutters.


Loadbars to fit rooftents onto vehicles with gutters.

Loadbars to fit rooftopent onto roofrack rails.

Bullbar kits for rooftents that are mounted at the front of vehicle roof racks

P.O. Box 68323, Bryanston 2021
14 Susan Str. Strydompark. Randburg
South Africa
Tel: (011) 792-1731 Fax (011) 791-0727

LADDER HEIGHT ADJUSTMENT INSTRUCTIONS

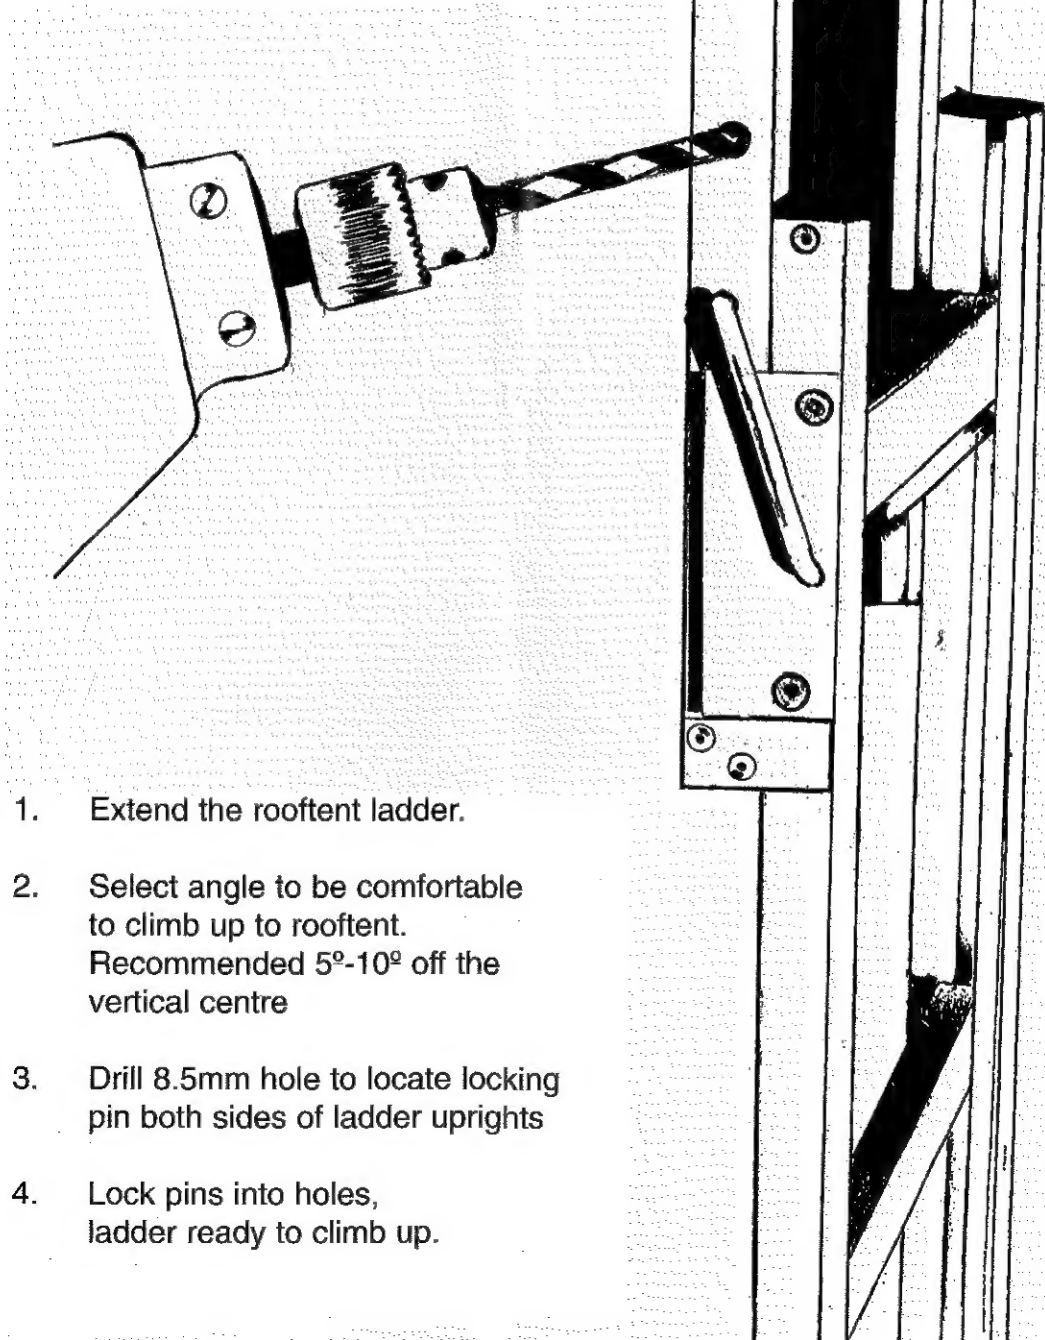

1. Extend the rooftop ladder.
2. Select angle to be comfortable to climb up to rooftop.
Recommended 5°-10° off the vertical centre
3. Drill 8.5mm hole to locate locking pin both sides of ladder uprights
4. Lock pins into holes,
ladder ready to climb up.